

Federzüge

Sprache > 

Air-Schlauchfederzug RASB - Tragkraft 0,6-5 kg



Air-Schlauchfederzug
Art.-Nr.: 952112000000

Einsatzbereich

- Federzug ideal für Vormontageplätze, bei denen z.B. Stabschrauber zum Einsatz kommen

Beschreibung

- Isolierte Aufhängung mit dreh- und schwenkbarem Schraubkarabinerhaken
- formstabilen Gehäuse mit Sicherungskette
- Traglastbereich - 0,6 kg bis 5,0 kg
- Seilauszug - 1,5 bis 1,6 m

Technische Daten / Gebrauchsanweisung

 
CAUTION **OPERATING MANUAL**
RASB1200/RASB2000/
RASB3000/RASB5000

 
Prohibition

Read this manual before use

- Install into a closed and solid fixture.
- This hole is used for hanging, do not lock tightly for wider operation direction.
- Take load off before adjusting.
- The + means the turning direction to increase capacity.
- Only press the spring 1 to 3 cm to decrease capacity.
- Loosen the screws and fasten the ball in a position of rope.
- Load the tool with the closed hook.

Temperature: -10 °C ~ 50 °C

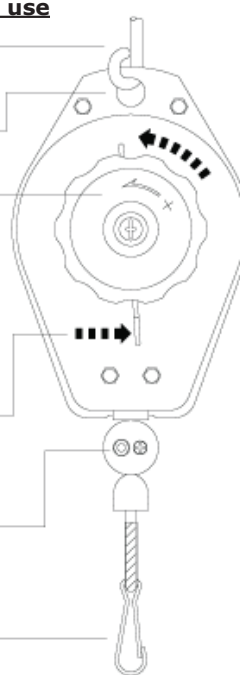

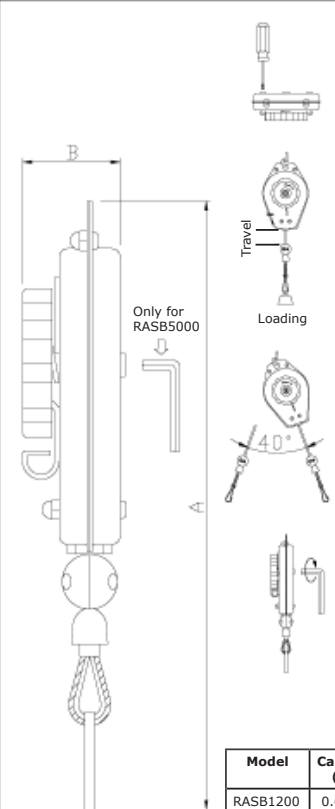

- Prohibition of disassembly.
- Don't twist and rub the cordage with cable during travel. Don't load over its capacity.
- Large angle using will debase the wire rope's life. Under 20° is better.
- To increase capacity of RASB5000, turn the spindle clockwise using the allen key.


Model	Capacity (kg)	Weight (kg)	Travel (m)	A (mm)	B (mm)
RASB1200	0.6~1.5	0.52	1.4	240	44
RASB2000	1.0~2.0	0.53	1.4	240	44
RASB3000	1.5~3.0	0.53	1.1	240	44
RASB5000	3.0~5.0	0.81	1.1	290	47

* Änderungen und Irrtümer vorbehalten, alle Preise zzgl. Verpackung und Mwst.

Balancers

Languages > 

 Balancer RASB / 0,6 - 5,0 kg

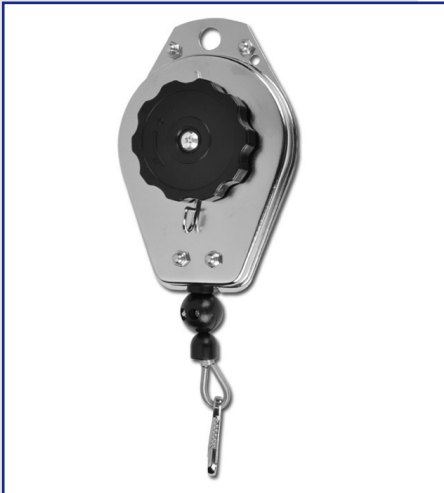

Balancer
Item No.: 952112000000


Application


Balancer ideal for sub-assembly work using beam-power screwdriver

Technical Data

Load Range - 0.5 kg up to 5.0 kg
Cable Extension - 1.5 up to 1.6 m

Instruction Manual


 **CAUTION**


 **Prohibition**


OPERATING MANUAL

RASB1200/RASB2000/
RASB3000/RASB5000

Read this manual before use

 Install into a closed and solid fixture.

 This hole is used for hanging, do not lock tightly for wider operation direction.


 Take load off before adjusting.

 
The + means the turning direction to increase capacity.

 
Only press the spring 1 to 3 cm to decrease capacity.

Loosen the screws and fasten the ball in a position of rope.


Load the tool with the closed hook.


 Temperature: -10 °C ~ 50 °C

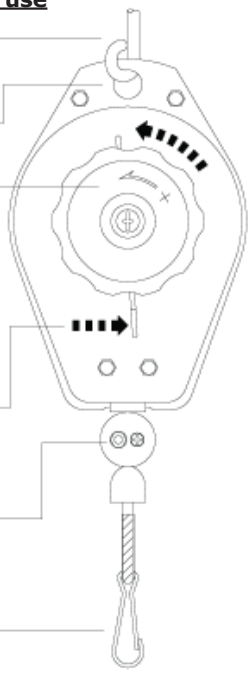

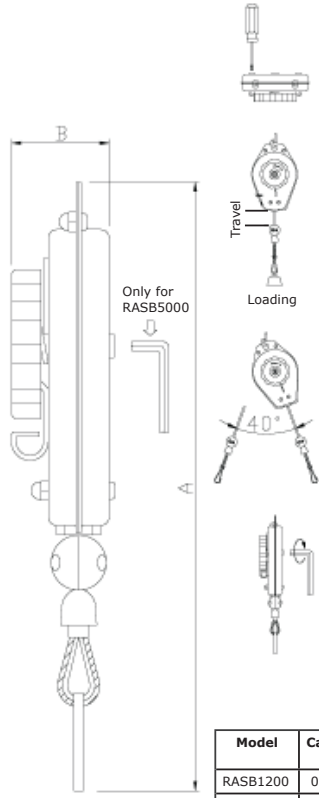



Only for RASB5000

 Prohibition of disassembly.

 Don't twist and rub the cordage with cable during travel. Don't load over its capacity.

 Large angle using will debase the wire rope's life. Under 20° is better.

 To increase capacity of RASB5000, turn the spindle clockwise using the allen key.

Model	Capacity (kg)	Weight (kg)	Travel (m)	A (mm)	B (mm)
RASB1200	0.6~1.5	0.52	1.4	240	44
RASB2000	1.0~2.0	0.53	1.4	240	44
RASB3000	1.5~3.0	0.53	1.1	240	44
RASB5000	3.0~5.0	0.81	1.1	290	47

* Änderungen und Irrtümer vorbehalten, alle Preise zzgl. Verpackung und Mwst.